

USER GUIDE



Consult Safety Instructions Before Use.

Organize, Create and Share



Pre-loaded FlipShare software makes editing and sharing your videos easy.

FlipShare Features

- Save videos to your computer.
- Organize your video library.
- Capture snapshots from your videos.
- Create custom movies and greeting cards.
- Share videos privately with friends and family or upload directly to:



FlipShare Installation Instructions

Just plug in your video camera and follow these simple steps.

Windows XP

- Select VIEW YOUR FLIP VIDEOS. Click OK.

Vista/Windows 7

- Select OPEN FOLDER to view files. Open SETUP_FLIPSHARE.

Mac

- Open FLIPVIDEO drive. Select START FLIPSHARE.



Visit the FlipShare software HELP section for detailed instructions on all features.

600-0151-103 / 3250-00249

Install Battery Pack

Welcome to Flip UltraHD™

- Slide battery latch to unlock.
- Slide front panel down.
- Position rechargeable Lithium-ion battery pack with **+** and **-** at the right side and Flip Video™ logo facing up.

Note: The battery pack is shipped partially charged. For best results, fully charge (up to 3 hours) before use. Simply follow steps in the Recharge Battery Pack section.

Using AAA Lithium Batteries

If you need a backup power source for your UltraHD, three AAA lithium batteries will provide power for a limited period of time. *Note: Alkaline batteries do not provide sufficient power for reasonable video camera usage and are not recommended.*



Get Started

- Press power button to turn on. Video camera setup appears automatically the first time you power on.

Set Language

- Use **+** and **-** to select your language.

Set Date

- Use **+** and **-** to adjust current setting.
- Use **<** and **>** to select month/day/year.

Set Time

- Use **+** and **-** to adjust current setting.
- Use **<** and **>** to select hour/minute/AM/PM.

Set Tones

- Use **<** and **>** to turn the tones on and off.

Set Recording Light

- Use **<** and **>** to turn the recording light on and off.

To Return to Video Camera Setup Later

Starting with the video camera OFF:

- Press power button to turn on.
- When UltraHD logo appears, press and hold record button until SET LANGUAGE appears.



Record and Play

Record Videos

- Press **●** to start/stop recording.
- Press and hold **+** and **-** to zoom in/out during recording.

Play Videos

- Press **>** to play/pause.
- Press and hold **+** and **-** to increase/decrease volume.

*Note: Press and hold **<** and **>** during playback to rewind/fast-forward.*

Delete Videos

- Press **▼** button. Select YES to confirm.

Note: Delete button is locked the first time you power on. To unlock, press and hold delete button.



Connect to Computer

- Slide USB latch down. USB arm flips up automatically.

- Plug USB arm into USB port on computer.

3 The battery pack will begin recharging and you can install pre-loaded FlipShare™ software on your computer.

Recharge Battery Pack

- Slide USB latch down. USB arm flips up automatically.

- Plug USB arm into USB port on computer.

3 Screen will display charging status.

displays to indicate charging in process.

displays to indicate a fully-charged battery.

- Fully recharging the battery pack takes up to 3 hours.
- Disconnect your video camera from the computer after charging to help preserve the battery pack's lifespan and performance.
- The optional Flip Video Power Adapter (available at www.theflip.com/accessories) can charge the battery pack in about 2 hours.

Note: Your computer must be powered on for your video camera to charge.



View On HD Television



Pre-loaded FlipShare software makes editing and sharing your videos easy.

FlipShare Features

- Save videos to your computer.
- Organize your video library.
- Capture snapshots from your videos.
- Create custom movies and greeting cards.
- Share videos privately with friends and family or upload directly to:



FlipShare Installation Instructions

Just plug in your video camera and follow these simple steps.

Windows XP

- Select VIEW YOUR FLIP VIDEOS. Click OK.

Vista/Windows 7

- Select OPEN FOLDER to view files. Open SETUP_FLIPSHARE.

Mac

- Open FLIPVIDEO drive. Select START FLIPSHARE.



Visit the FlipShare software HELP section for detailed instructions on all features.

600-0151-103 / 3250-00249

Video Camera Features



1 Power Button	Press to turn on/off.
2 Wrist Strap Hook	Attach wrist strap (included in box).
3 Tripod Mount	Attach a tripod or other Flip Video accessory.
4 HDMI™ Micro Port	Connect HDMI™ cable accessory to your HDTV.
5 FlipPort	Connect accessories to your Flip™ video camera.
6 Battery Latch	Slide to lock/unlock.
7 Recording Light	Red light turns on during recording. Built-in wide-range microphone is also located here.
8 USB Latch / Arm	Slide down to release USB arm. Connect to a PC or Mac USB port.
9 Screen	Recording viewfinder/playback screen.
10 Recording Controls	Press buttons to record and preview videos.
Record Button ●	Press to start/stop recording. <i>During power on: Hold to return to video camera setup.</i>
Play Button >	Press to play/pause playback. Press and hold to play all videos.
Delete Button ▼	Press to delete. Press and hold to lock/unlock the delete button.
Up/Down Buttons +-	<i>While recording: press and hold to zoom in/out. During playback: press and hold to increase/decrease volume.</i>
Left/Right Buttons <>	<i>While paused: press to skip to previous/next video. During playback: press and hold to rewind/fast-forward.</i>

Extend the fun with Flip Video Accessories. Learn more at www.theflip.com/accessories.

Included In This Box:

Flip UltraHD™ Video Camera, Rechargeable Battery Pack, Wrist Strap, Soft Case, User Guide, Safety Instructions and Warranty Information

Flip Video Support:

Go to www.theflip.com/support

Declaration of Conformity:

Responsible Party:
Cisco Consumer Products LLC, 185 Berry Street, Suite 6500, San Francisco, CA 94107 USA



FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio and TV Interference
This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in Part 15 of FCC rules. These specifications are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

CAUTION: Changes or modifications to this device not authorized by Cisco Consumer Products LLC may void the user's authority to operate this device. CANADIAN ICES-003 STATEMENT:

This Class B digital apparatus complies with Canadian ICES-003.

Operation is subject to the following two conditions:

1. This device may not cause interference and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Cisco, the Cisco logo, FlipShare, UltraHD, Flip Video and the Flip Video logo are trademarks or registered trademarks of Cisco and/or its affiliates in the United States and other countries. A listing of Cisco's trademarks can be found at www.cisco.com/go/trademarks. All other trademarks mentioned in this document are the property of their respective owners. For more information, please visit www.theflip.com.

© 2010 Cisco and/or its affiliates. All rights reserved.

Facebook, Twitter, and YouTube are trademarks of their respective owners.

The HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.