This guarantee does not affect your statutory rights.

To find out what to do, if your phone is in or outside of the 12 month guarantee, please look in the full user guide at **bt.com/producthelp**

the best way - to be kinder to the planet, get rid of dangerous things more safely and bury less rubbish in the ground. You should contact your retailer or supplier for Your BT Converse 2300 is guaranteed for a period of advice on how to dispose of this product in an

R&TTE Directive & Declaration

of Conformity

(1999/5/EC)

compatible switchboards

environmentally friendly way.

This product is intended for use within the UK for

connection to the public telephone network and

Telecommunications Terminal Equipment Directive

This equipment complies with the essential

requirements for the Radio Equipment and

The Declaration of Conformity is published on

the website **bt.com/producthelp**

your normal rubbish bin. It's all part of the Waste Electrical and Electronic Equipment (WEEE) Directive to recycle products in

The symbol shown here and on the product means that the product is classed as electrical or electronic equipment, so DO NOT put it in

How to recycle your equipment

 
X

To remove the desk mounting plinth, push it in the same direction as the two arrows Desk mounting plinth



(lenoitqo) pnitnuom lleW

or plumbing. Make sure the telephone line cord will reach the wall socket. 🕕 Important: Before wall mounting, check you are not drilling into any hidden wiring



General information

cleaning, technical information or

section in the full user guide at

12 months from the date of purchase.

refurbished or repaired product.

• Proof of purchase is required.

as instructed.

approved agents.

The conditions of this guarantee are:

Subject to the terms listed below, the guarantee

discretion the option to replace the BT Converse 2300, or any component thereof, which is identified

will provide for the repair of, or at BT's or its agent's

as faulty or below standard, or as a result of inferior

from the date of purchase may be replaced with a

• The guarantee shall only apply to defects that

occur within the 12 month guarantee period.

• The equipment is returned to BT or its agent

This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear,

attempt at adjustment or repair other than through

neglect, tampering with the equipment, or any

workmanship or materials. Products over 28 days old

bt.com/producthelp

Guarantee

connecting to a switchboard, please refer to the 'General information'

For information on safety instructions,

OVEL นมทา

Please

the bottom of the phone. remove it. Re-route the telephone line cord towards Unclip the stand from the base of the phone and

Viliation of the wall 70mm vertically

.fid llinb mm2 ne pnisu freqe

Insert the wall plugs if necessary, then insert the

screws leaving about 5mm protruding from the

.9nohq adt pnad of doidw no llaw

heads and gently pull the phone down to fix it securely in place. Slot the holes on the back of the base over the screw

Your Converse 2300 is now ready for use.

The services described in this publication are subject to availability and may be modified from time to time. Services and equipment are supplied subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of a contract.

For a Better Future **P**

on the environment.

bt.com/betterfuture

We're always looking to make our products last longer

and use less power, so we don't have such a big impact

To find out about what we are doing, visit

© British Telecommunications plc 2016 Registered Office: 81 Newgate Street, London EC1A 7AJ. Registered in England No. 1800000.

Designed and produced by The Art & Design Partnership Ltd.

Printed in China / Issue 3 / ADP01-16

Offices worldwide



BT Converse 2300 **Corded Phone** Setting up is easy. Just follow the simple steps in this guide.

bt.com/producthelp

1 Set up **2** Go!

User Guide

BT

dn təč 🚺

the socket marked L and plug the other end into the wall socket and switch T. Plug mains power adaptor (item code 084/21 white and 0662/0 black) into

the power on.

066270 black product) 084721 white product :səboɔ məナi)





(already fitted to base) Telephone line cord

this box, or this product may not work. . 🕕 Important: Only use the handset, line cord and mains power adaptor supplied in

port wall mounting

your service provider.

(I)

Plug the telephone line cord into the wall socket.

. . .

is set to **TB** for tone dialling with timed break recall. 3. Check that the Dialling Mode switch on the underside of the base


to P or T using the switch on the underside of the base. If in doubt, please consult (E) If connecting to a switchboard you may need to adjust the dialling mode setting,

If you'd like further help, or to view the full user guide, please visit our website






Check box contents

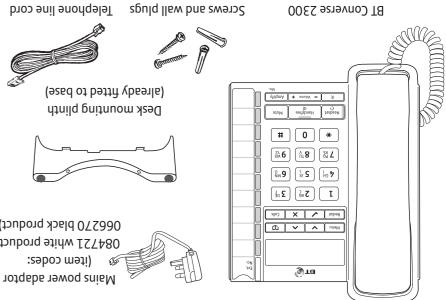

corded telephone

Your phone 🖉

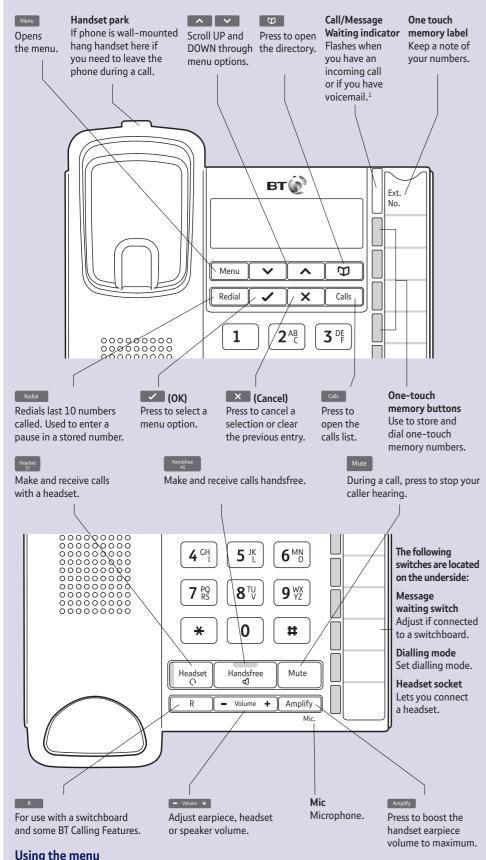

A range of functions and settings can be accessed through the main menu.

When you reach the end of the list, the first option is displayed again.

Press Menu to enter the menu.

To select an option, press

Press or to scroll through the menu list.

To return to the previous menu display, press

The light will not flash when used with network services, e.g. BT 1571.

1 The light will only flash when connected to a PBX switch or similar.



🗐 Handset & Hearing Aid 🔊 Hearing aid wearers may benefit from switching their hearing aid to the middle T position and holding the earpiece up to the aid, not their ear. Please visit http://www.btplc.com/inclusion/ for further practical advice on using hearings aids.

Making calls

Lift the handset and dial the phone number. Replace the handset to end the call.

Make a call using a headset

Headsets are not supplied. However, you can purchase headsets (with RJ11 jack) by visiting bt.com/shop

Plug the headset into the socket marked O^{J} on the underside of the base.

Press Headset and dial the number. When the headset is in use the headset indicator (on the Headset button) will be lit.

Press Headset to end the call.

Receive a call using a headset

When the phone rings and the headset is plugged in, press Hester to answer.

Redial (up to last 10 numbers)

Press Redial, scroll or to the number you want and either lift the handset to dial, or press Handsfree or Headset

Handsfree

Press Handsfree during a call to switch between earpiece and loudspeaker.

Mute

Press Mute during a call. The red Mute light (on the Mute button) comes on and your caller cannot hear you. Press Mute again to return to your caller.

Adjust the ringer volume

There are 4 volume settings: 1, 2, 3 and Off.

Press Menu and scroll or to display Ringer Volume. Press .

Scroll or to the setting you want.

Press **I** to confirm. Display shows Saved.

Press Menu to return to standby.

Adjusting the ringer tone

There are 3 tones to choose from: Tone 1, Tone 2 and Tone 3.

Press Menu and scroll or to display Ringer Tone. Press

Scroll or to the setting you want.

Press with to confirm. Display shows Saved.

Press Menu to return to standby.

Caller Display and the Calls list

(a) You must subscribe to a Caller Display service for this feature to work. Your network provider may charge you for this service.

View and dial from the calls list

Press . Display shows most recently received call.

Press or to scroll through the list.

Lift the handset, or press Handsfee or Heedet to dial a displayed number.

Directory (up to 100 entries)

Storing new directory entries press Menu).

Entry Saved.

Dialling a directory entry

Press **v** to dial.

Store/replace a one touch number

Press and hold the one touch memory button that you want to store a number under. The display shows Enter/Edit number.

Enter the telephone number you want to store, then press the same one touch memory button or the **v** button to save the number.

Dial a one-touch number

Lift the handset or press Handsfree or Headset

? Help

Problem

No dial tone

You have a dial tone, but the phone will not dial out

Phone ringer does not ring

Using broadband on the same phone line?

Q Find out more

New Frequently Asked Questions available at **bt.com/producthelp**

Press 🖤 then Menu. (When you store your very first entry you will not need to

Display shows Add New Entry. Press

Display shows Enter Name: Enter the name and press

Display shows Enter Number: Enter the number and press . The display shows



Lift the handset or press Handsfree or Headset

Press . The first number in the directory is displayed.

Scroll or to the number you want.

One-touch memory buttons (M1-M10)

Slide the memory label out so you can write the number you have stored under each button.

Press the grey one-touch button you want to dial.

Most problems can be fixed with a few simple checks.

Solution

Only use the cables supplied. Make sure the telephone line cord is plugged in correctly.

If you are connected to a switchboard, check whether you need to dial an access code or if you need to change the dial mode.

Is the ringer volume switched off? Adjust the volume.

To avoid problems with your broadband or noise on your phone line, you might need to plug your telephone line cord into the wall socket via a microfilter (not supplied).

If your main phone socket has a single socket, as shown, you'll need to use microfilters.

You don't need to use microfilters if

your main phone socket has two separate sockets, like either of these:

If you need more detailed instructions, a full user guide is available to download from bt.com/producthelp